

GOT DPF?

INSTRUCTIONS FOR DRIVERS

DIESEL PARTICULATE FILTER (DPF) INDICATOR
LIGHTS AND ACTIONS REQUIRED

THE DPF STATUS LIGHT IS ON SOLID



THIS IS THE FIRST INDICATION THE VEHICLE MAY REQUIRE REGENERATION. SEVERAL HOURS OF OPERATION MAY BE POSSIBLE BEFORE ANY DE-RATE OF THE ENGINE OCCURS.

THE DPF STATUS LIGHT IS FLASHING



THIS IS **A SECOND WARNING** THAT A PARKED REGENERATION IS REQUIRED. YOU SHOULD PERFORM A PARKED REGENERATION AS SOON AS POSSIBLE.

YOU HAVE **TWO OPTIONS:**

01

Drive the truck at uninterrupted highway speeds for automatic regeneration.

02

Follow instructions below for performing a parked regeneration.



INSTRUCTIONS FOR PERFORMING A PARKED REGENERATION